


TYPICAL CROSS SECTION PEDESTRIAN APPLICATION

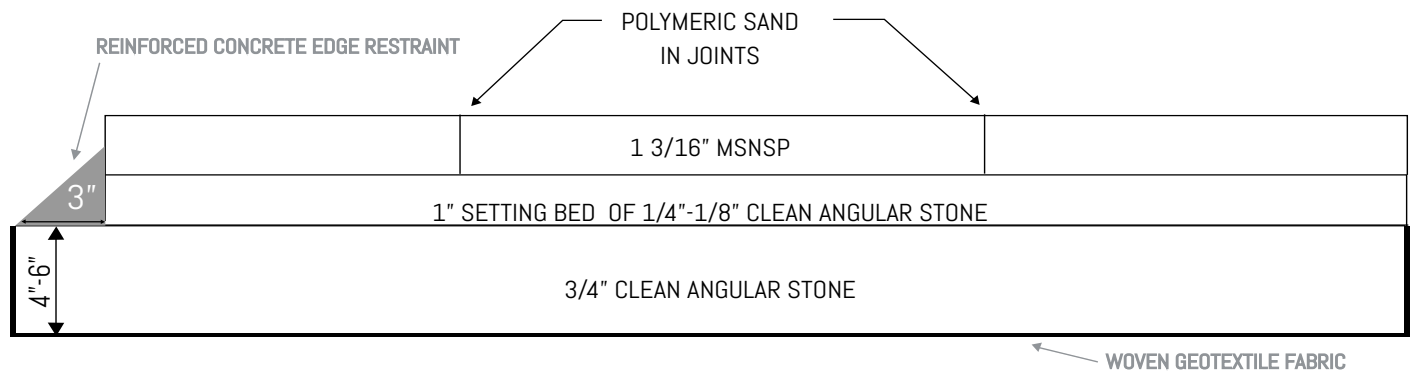

1. Install woven geotextile fabric on subgrade.
2. Place 4"-6" of 3/4" clean stone compacted in 3"-4" lifts.
3. Screed 1/4"-1/8" clean angular stone for the setting bed.
4. Install 1 3/16" MSNSPs.
5. Perform all cutting with a diamond blade.
6. Sweep overlay polymeric sand in the joints (install polymeric sand per manufacturer's instructions, which are located on the back of the bag).
7. Apply the reinforced concrete edge restraint along the outside edges.
8. Tamp the antiqued pavers with a four horsepower vibratory plate compactor, using a rubber mat, not a polyurethane mat.
9. A vibratory roller is recommended when tamping sandblasted pavers.

*MSNSP - MARMIRO STONES® NATURAL STONE PAVER